

Sectional Door Framing Instructions 6 Panel 2866-3400h

09 422 2299

- Work area to be clear prior to installation (width of door and 4 meters back)
- No other persons in the work area during installation
- Inside face on sides and above door to be flush
- Wall and ceiling to be lined prior to installation and all paint/plaster to be completely dry


Warning: Delays or non installation due failure to adhere to these instructions may incur additional charges.

Minimum Clearances:

Std Headroom 300mm Low Headroom 200mm Sideroom 135mm Side fixing 90mm Backspace Door height + 1m

Rebate 75mm past opening 75mm back from architrave 25mm deep

Note: Headroom is measured from the underside of the trim to the lowest point. This includes any GIB cove or beams that are lower than the ceiling.

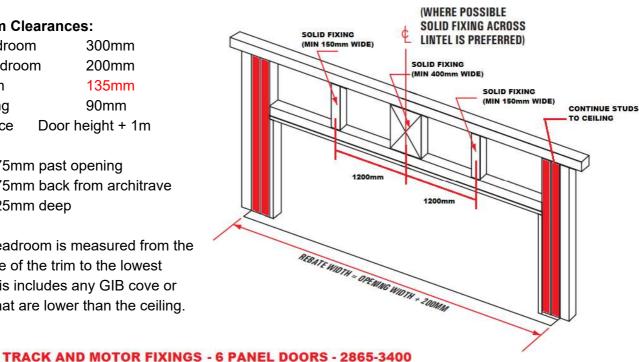

2000mm 3300mm 150mm 150mm 4150mm 4500mm Power point

Site Specific:

Lintel:

Side fixing:

Ceiling:

Gib Cove:

Architraves:

Trim:

Rebate: