

Sectional Door Framing Instructions 09 4 Roller Domestic - Series A

- 09 422 2299
- Work area to be clear prior to installation (width of door and 3 meters back)
- No other persons in the work area during installation
- Inside face on sides and above door to be flush
- Wall and ceiling to be lined prior to installation and all paint/plaster to be completely dry

Warning: Delays or non installation due failure to adhere to these instructions may incur additional charges.


Minimum Clearances:


Headroom 400mm
Sideroom manual 90mm
Sideroom motor 135mm
Backspace 450mm

Rebate 75mm past opening 75mm back from architrave 25mm deep

Note: Headroom is measured from the underside of the trim to the lowest point. This includes any GIB cove or beams that are lower than the ceiling.

Note: For Automatic operation a power point is required on the wall within 1.0m of the unit.

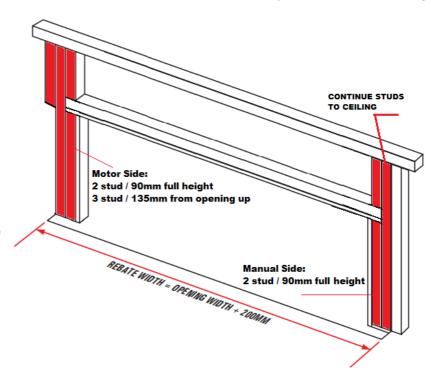

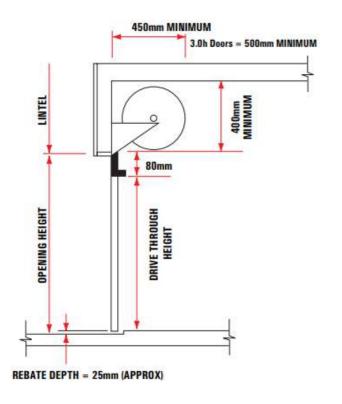

Site Specific:

Lintel:

Side fixing:

Ceiling:

Gib Cove:

Architraves:

Trim:

Rebate: